

Photo Printing Solutions



P95DW-DC

Medical B/W Printer

The true compact black & white printer

With its new minimized dimensions of only 130mm depth, the new P95DW-DC is much smaller than other printers. By this minimized size, weight and 24V DC power supply, the printer is intended to be integrated into smallest space of CT/MRT for printing photo realistic BW images from 100x75mm up to panorama 450x100mm.

Simple operation from front panel buttons, easy and fast exchange of paper within few seconds, maintenance free operation are bases for long-term and troublefree usage, on the other side 7 different picture formats, sophisticated possibilities of driver with individually adjustable gamma curve for precise adjustment of printer to fit maximally to any application.

Main features

- // Small size: 154 x 84,5 x 130mm
- // Very low weight: 1,6kg
- // Long print format size up to 450x100mm
- // Printing speed from 4.9 secs
- // 24V DC powered (power supply not included)
- // 5 thermal Mitsubishi papers available

Features




Print size



Easy to use



Compact Size



High Resolution




Printing time

P95DW-DC



FRONT PANEL

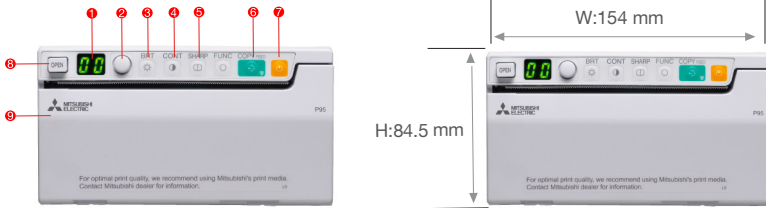

- 1 Display
- 2 Brightness adjustments
- 3 Mode button
- 4 Contrast button
- 5 Sharpness button
- 6 Print button ON/OFF
- 7 Print button ON/OFF
- 8 Open button
- 9 Front door

REAR PANEL



- 10 USB 2.0
- 11 24V DC

Technical specifications

Model	P95DW-DC
Print method	Thermal sensitive
Resolution	Printhead 325 dpi (12.8 dots/mm), up to 1280x5760
Color depth	256 greyscales
Print speed/Picture (without data transfer)	1,9 – 3.9 sec (1,280 x 960)
Print size	Thermal paper roll, 110mm wide
Print Area	100x75mm (standard) / 100x450mm (max.)
Paper capacity	220-245 prints and 18-20m long approx. Depending on paper reference
Printer memory	1 frame (8Mb), repeat print with COPY button
Interface	USB 2.0 (High Speed)
Printer driver	Microsoft Windows 2000, XP, 7/ 8 / 10 (32/64 bit) and MacOSX
Power supply	DC24V (power supply not included)
Power consumption max.	3.5 A
Dimensions (WxHxD)	approx. 154 x 84.5 x 130 mm
Weight	approx. 1.6kg
Approvals	UL/CE/KC
Consumables	KP61B-CE, KP65HM-CE, KP91HG-CE, K95HG, KP63HM

Specifications are subject to change without notice.

11VP95DW-DCENT19_MAY19